



AqueECO POND PUMP

**3000 / 4500 / 6000 / 8000 / 10000
/ 12000 / 14000 / 16000 / 20000**



CLIP-RELEASE FILTER CAGE

ENERGY-SAVING

EASY MAINTENANCE

MULTI DIRECTIONAL OUTLET

To ensure your new pond pump is set up and running correctly, and to prevent any accidental damage or injury, please read and follow the below instructions carefully before using your product.

SAFETY

IMPORTANT! Disconnect the mains electricity supply before attempting any installation / maintenance of any kind. Do not attempt to modify this unit in any way and only use the recommended parts for replacement.

- The AquaECO pond pump should never be run dry as this will cause the unit to overheat and cause permanent damage.
- All connections must be earthed.
- The power cord of this appliance cannot be replaced; if the cord is damaged, the appliance should be discarded. Never cut the cord.
- Do not connect to any voltage other than that stated.
- Do not place in liquids other than water.
- Do not use with water above 90°F or 30°C.
- Do not carry or pull the unit by its electrical cable.
- Do not use this unit if it has a damaged cord, if it is malfunctioning or it is dropped or damaged in any manner
- Do not attempt to modify this unit in any way and only use attachments and the recommended parts for replacement recommended by the manufacturer.
- Before installing, maintaining or handling your equipment, or before placing your hands in your pond, ensure that the unit is disconnected from the electricity supply.
- Always disconnect any electrical devices when not in use.
- To avoid injury, do not touch hot or moving parts such as, but not limited to UV bulbs or impellers.
- During maintenance ensure all O-rings are present and intact.

- If the appliance shows any signs of water leakage or the RCD unit switches off, disconnect the unit from the power supply and consult the retailer where you purchased the unit.
- Do not install or store this unit where it will be exposed to temperatures near to 0°C / 32°F. In freezing conditions, remove and store the unit in a sheltered area ensuring all water has been drained from it.
- Do not bury the cord for this unit. Ensure it does not cause a trip hazard or it at risk from damage from lawn mowers, strimmers or other garden equipment.
- This is a submersible product - do not operate the product if not fully submerged.

Please note – this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided they are given supervision and instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance. Any maintenance must not be made by children without supervision.

ELECTRIC

This unit comes complete with a generous supply of 3 core cable, however should any additional cable be required, the use of an approved waterproof cable connector with a proper rating is essential. A cord rated for less amperes or watts than the appliance rating may overheat.

Please Ensure:

- The power supply must be earthed and fused at 3amps.
- You regularly inspect the cable for damage and deterioration.
- Do not connect to any voltage other than that stated.
- You consult a qualified electrician if in doubt about any aspects of wiring.
- A residential current device (RCD) is used for additional safety
- You have complied with Local Electricity Authority regulations if permanently installing to the mains supply.


Please Ensure: The power supply must be earthed and fused at 3amps. Regularly inspect the cable for damage and deterioration. Consult a qualified electrician if in doubt about any aspects of wiring.

INSTALLATION & USE

The All Pond Solutions AquaEco pump range can be used to circulate water or to pump to and from a separate filtration system or water features using suitable flexible hose (flexible hosing sold separately). It can only be used with freshwater and tropical set ups.

Please read the below instructions carefully before beginning to set up your pump. **DO NOT CONNECT THE UNIT TO THE MAINS UNTIL SET UP IS COMPLETE AND UNIT IS FILLED WITH WATER.**

1. Connect the required attachments - start off by attaching the adaptor to the unit. You can then attach the rest of the parts in this order: hosetail o-ring, hosetail, hosetail nut.

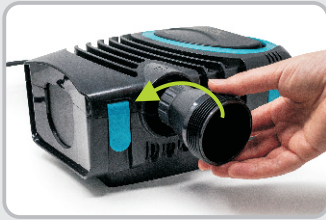

Inlet hose - if an inlet hosetail is required, you can follow the above instructions to assemble it after you remove the inlet guard (see image on the right).

2. Position the pump - fully submerge your AquaECO unit. Place it on a level and sturdy surface at the bottom of your pond, this is to avoid silt entering the pump causing excessive wear and increasing filter cage cleaning.



3. Connect your AquaECO pump to the mains - Connect the unit to the mains using a residual current device (RCD) for additional safety.

4. Switch on your unit at the mains - turn on the operation by switching on the unit at the mains.

MAINTENANCE

To ensure optimal performance and that your unit functions correctly, regular maintenance is essential. Failure to do so may result in damage to your unit and may invalidate your warranty.

We recommend that a regular cleaning and maintenance schedule is followed to ensure responsible fishkeeping. Depending on water volume and stocking levels, regular cleaning of the impeller and inlet/outlet pipework will help ensure that the product works efficiently and your pond remains healthy.

For further maintenance guidance, please see the table and additional information below:

	1 MONTH	3 MONTHS	6 MONTHS	ANNUALLY
All Pipework	Clean & Inspect			
Hosing				Clean & Inspect
O-Rings	Clean & Inspect	Lubricate & Clean		Replace

O-rings

It is vital that O-rings are regularly inspected and replaced as the rubber watertight seal will perish over time, which may cause your unit to leak. Before replacing your o-rings, ensure they are well lubricated to ensure the seal is kept water tight.

Pump Maintenance

IMPORTANT! Failure to carry out routine maintenance and/or leaving the pump with reduced/no flow rate for long periods will result in a shorter pump life and will invalidate the warranty.

It is recommended to disconnect your pump and clean the impeller and pipework monthly. Pipework will become blocked with waste and protein slime over time, so regular cleaning is important for optimal performance.

The frequency of how often you will need to clean and inspect your unit of course will depend on a lot of factors like how dirty the water is when you first start using your pump, your pond volume and also how many fish you have. How often you feed your fish and seasonal light levels will also affect how quickly your pond water gets dirty and will need to be taken into consideration when planning how often to clean your AquaECO unit.

Pump casing - can be removed by unfastening the casing clips on the side of the pump's body and lifting up the upper filter cage



Impeller - can be accessed by removing the pump's housing. Simply rotate it in anti clockwise direction to release lock.

The impeller can then be firmly pulled away from the housing and inspected.


Ensure that the plastic propeller part of the impeller is attached to the magnetic part and that they have not come apart or split. If this is the case you need to replace your impeller. Wash parts with fresh water carefully.

Clean body and all attachments. Reassemble.



PARTS DIAGRAM

For 3000/4500/6000/8000/10000/12000/14000/16000

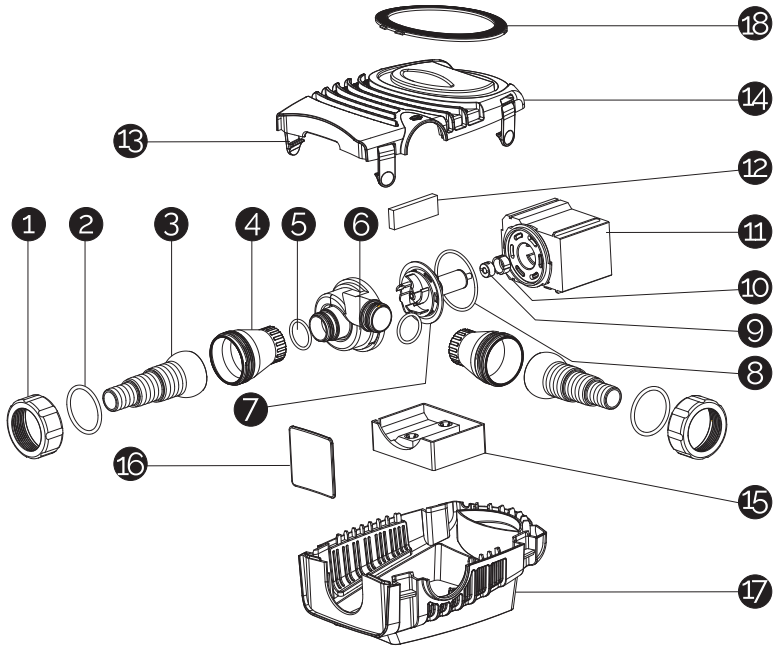


1	HOSETAILED NUT
2	HOSETAILED O-RING
3	INLET/OUTLET HOSETAILED
4	ADAPTOR
5	SMALL O-RING
6	PUMP HOUSING
7	IMPELLER
8	IMPELLER O-RING
9	IMPELLER BEARING

10	BEARING HOUSING
11	PUMP MOTOR
12	RUBBER STOPPER
13	FASTENING CLIP
14	UPPER FILTER CAGE
15	MOTOR BRACKET
16	INLET GUARD
17	LOWER FILTER CAGE
18	UPPER FILTER CAGE RING

PARTS DIAGRAM

For 20000

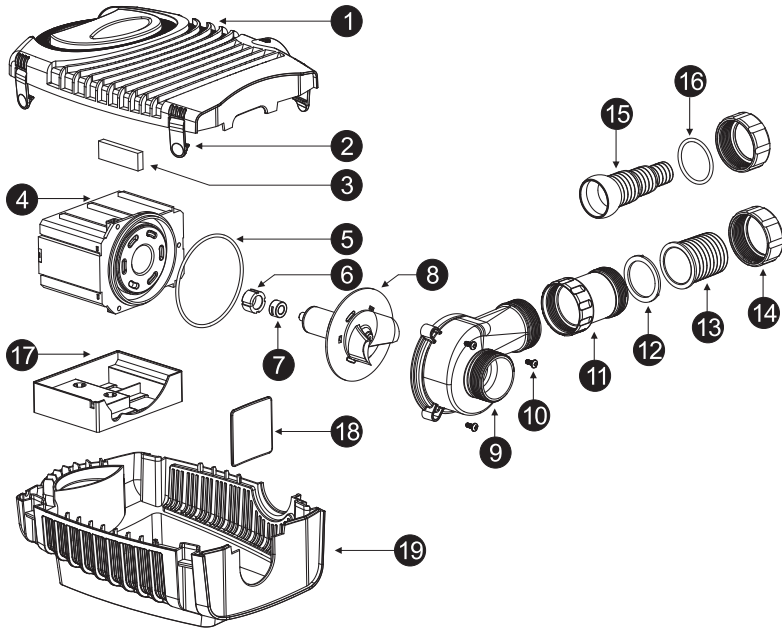

1	UPPER FILTER CAGE
2	FASTENING CLIP
3	RUBBER STOPPER
4	PUMP MOTOR
5	IMPELLER O-RING
6	BEARING HOUSING
7	IMPELLER BEARING
8	IMPELLER
9	PUMP HOUSING
10	SCREW

11	ADAPTOR
12	GASKET
13	INLET/OUTLET HOSETAIL 1
14	HOSETAIL NUT
15	INLET/OUTLET HOSETAIL 2
16	O-RING
17	MOTOR BRACKET
18	INLET GUARD
19	LOWER FILTER CAGE

TROUBLESHOOTING

Slow Flow Rate

- 1.** For optimum function of the unit, we highly recommend the pump is positioned on a brick, so it is not resting directly on the bottom on the pond. This is to prevent large clumps of debris blocking the inlets and restricting the flow.
- 2.** Follow the maintenance section. Ensure pipework is not blocked, leaking or is laid so that it gets crushed or kinked. Ensure the filter casing isn't blocked.
- 3.** Locate the impeller and shaft in the pump and inspect for damage and clear the fittings and parts of any waste build-up.
- 4.** The higher the head (the height that water is to be pumped from the water surface) the lower the flow rate and the more wear on the pump so try to keep it to a minimum.
- 5.** Ensure that the plastic propeller part of the impeller is attached to the magnetic part and that they have not come apart or split. If these parts looks fine and there are two rubber grommets fitted on each end of the shaft, or already inside the fittings, then re-assemble the unit.

No Flow From Pump

- 1.** Check power supply is on.
- 2.** Check fuse and cable for any damage.
- 3.** Follow the slow flow rate guide (see above) and keep any hose fittings to a minimum. This helps to remove frictional loss of flow and so increases pump flow rates.

My Unit is Cutting Out

- 1.** For optimum function of the unit, we highly recommend the pump is positioned on a brick, so it is not resting directly on the bottom on the pond. This is to prevent large clumps of debris blocking the inlet and restricting the flow.
- 2.** Ensure that all O-rings are in place and well lubricated.
- 3.** Locate the impeller and shaft in the pump and inspect for damage and clear the fittings and parts of any waste build-up.
- 4.** Ensure that the plastic propeller part of the impeller is attached to the magnetic part and that they have not come apart or split. If these parts looks fine and there are two rubber grommets fitted on each end of the shaft, or already inside the fittings, then re-assemble the unit.


If none of the above resolves your issue, or you require spare parts for your pump, please contact the supplier of your unit.

SPECIFICATIONS

MODEL:	AquaECO-3000	AquaECO-4500	AquaECO-6000
MAX HEAD (m)	2	4	4.2
MAX FLOW RATE:	3000 L/H	4500 L/H	6000 L/H
HOSETAIL CONNECTOR (mm):	25 / 32 / 38mm	25 / 32 / 38mm	25 / 32 / 38mm
WATTAGE:	10w	30w	40w
CABLE LENGTH:	10m (Plug not included)	10m (Plug not included)	10m (Plug not included)
VOLTAGE:	220-240V	220-240V	220-240V

MODEL:	AquaECO-8000	AquaECO-10000	AquaECO-12000
MAX HEAD (m)	5.6	6	6.5
MAX FLOW RATE:	8000 L/H	10000 L/H	12000 L/H
HOSETAIL CONNECTOR (mm):	25 / 32 / 38mm	25 / 32 / 38mm	25 / 32 / 38mm
WATTAGE:	70w	80w	100w
CABLE LENGTH:	10m (Plug not included)	10m (Plug not included)	10m (Plug not included)
VOLTAGE:	220-240V	220-240V	220-240V

MODEL:	AquaECO-14000	AquaECO-16000	AquaECO-20000
MAX HEAD (m)	7	7.5	6.0
MAX FLOW RATE:	14000 L/H	16000 L/H	20000 L/H
HOSETAIL CONNECTOR (mm):	25 / 32 / 38mm	25 / 32 / 38mm	25 / 32 / 38 / 50mm
WATTAGE:	120w	140w	180w
CABLE LENGTH:	10m (Plug not included)	10m (Plug not included)	10m (Plug not included)
VOLTAGE:	220-240V	220-240V	220-240V

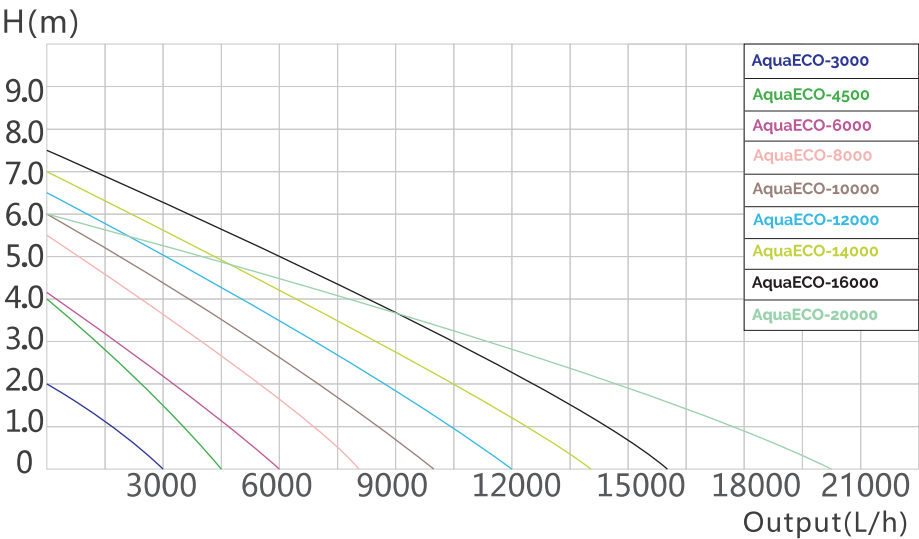

WARRANTY

The All Pond Solutions AquaECO pump range is guaranteed against defects in material or workmanship under normal pond usage and comes with 24 months warranty for all electrical parts. The warranty period commences from the date of purchase.

If you require support on how to use your unit, replacement parts or if your pump develops a fault during the warranty period, please contact the supplier of your unit.

Non-replaceable, non-perishable and non-serviceable parts will be repaired or replaced free of charge, once the unit is returned with all components along with a valid proof of purchase and postage paid. We reserve the right to replace or repair the unit at our discretion.

Please be aware that perishable parts that are subject to normal wear and tear, such as impellers, impeller covers and motor seals are not covered by your warranty and a charge may be required for replacements of these.

This warranty does not apply to any unit that has been subjected to misuse, accidental damage, negligence, tampering or customisation. It does not apply to units which have been assembled incorrectly, improperly maintained, or where the instructions and safety information in this manual has not been followed correctly.

No liability is assumed with respect to loss or damage to livestock or personal property irrespective of the cause thereof.

Please ensure that only genuine All Pond Solutions components are used when completing a replacement or repair. Spare parts are available at our official website or from your local supplier.

Before returning your unit under warranty terms, check that all setup and maintenance instructions have been correctly followed. If you are in doubt, please contact your local aquatic retailer for further advice before returning the product.

This does not affect your statutory rights.



www.allpondsolutions.co.uk

All Pet Solutions Ltd Trading as All Pond Solutions
22 Wycombe End, Beaconsfield,
Buckinghamshire, England,
HP9 1NB